

RS232/485 TO ETH

From Waveshare Wiki

Jump to: navigation, search

Internet login

Method 1: Access router or switch


test

- Connect the RS232/485 TO ETH to the computer and the switch or router connected to the LAN respectively (in this way, firstly, the network cable of the computer does not need to be unplugged to avoid network disconnection; secondly, the RS232/485 TO ETH connected to the Internet can be connected to the public network TCP Server communication), fixed IP of RS232/485 TO ETH.
- Control Panel (File Explorer) -> Network Connections -> Double-click the network card -> Details -> See the computer IP (here is 192.168.11.121).




(/wiki/File:RS232-RS485_net.png)

- Click the device factory IP: 192.168.0.7- > set the static IP to the same frequency band IP as the computer () -> subnet mask default -> set the corresponding gateway -> click set.

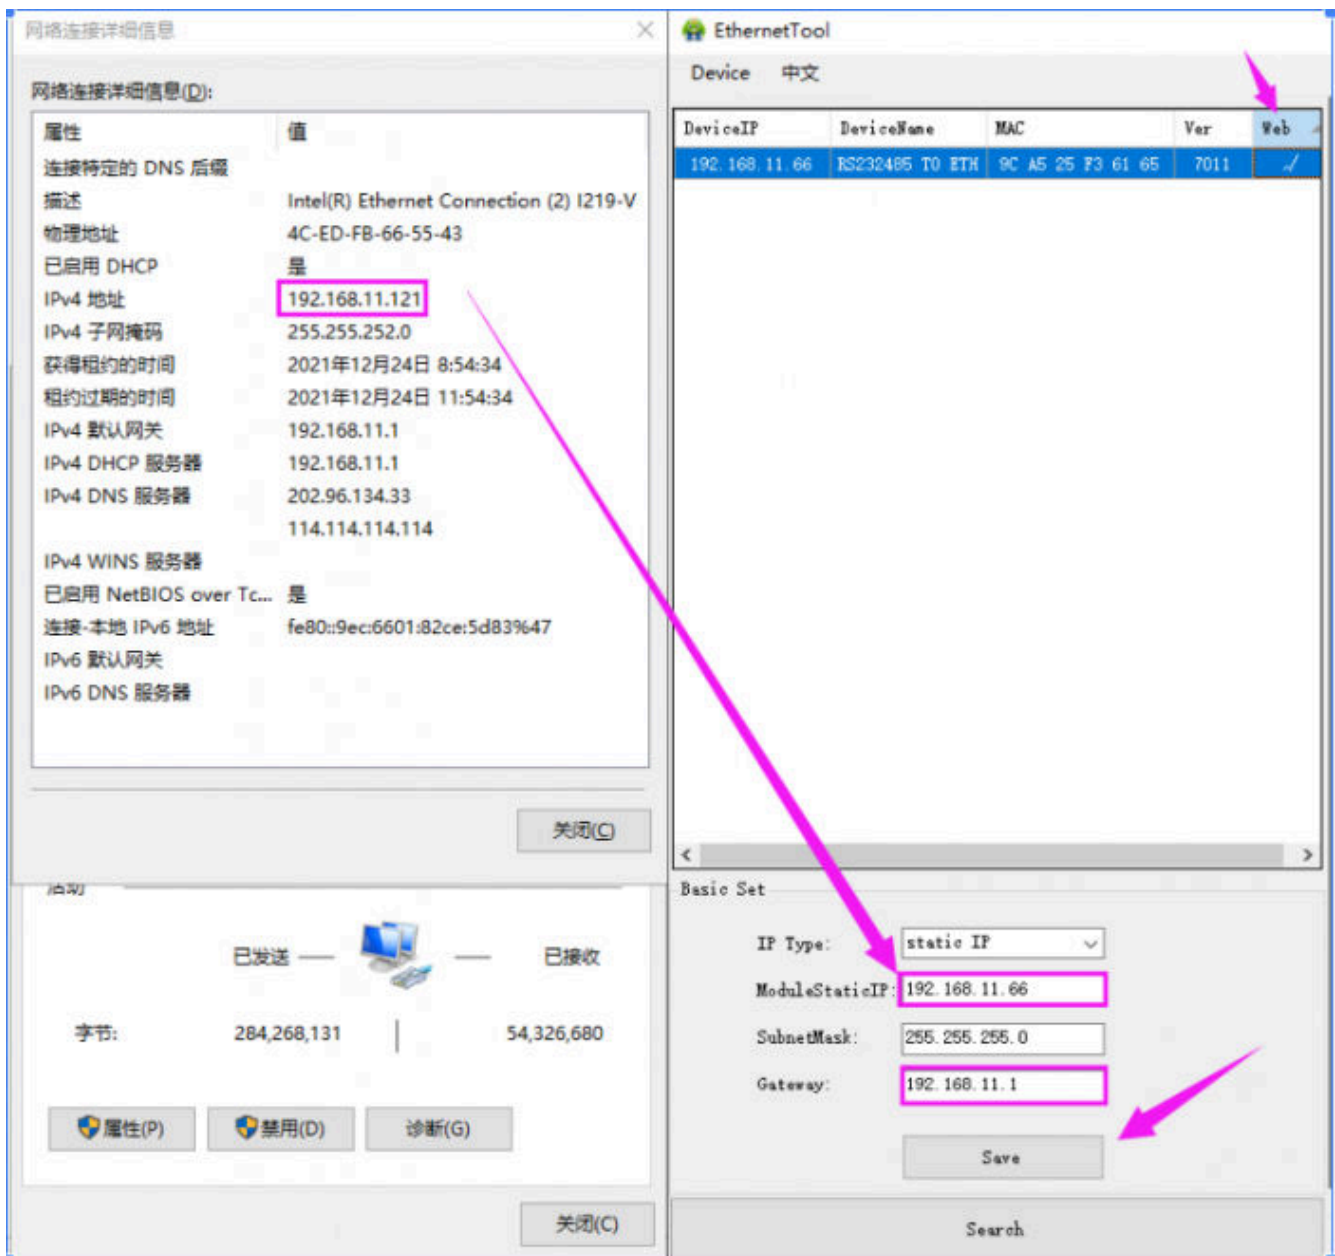

(/wiki/File:RS232-RS485_net_(1).png)

- Double-click the upper right corner of the webpage -> enter the account and password (the initial value is: admin).

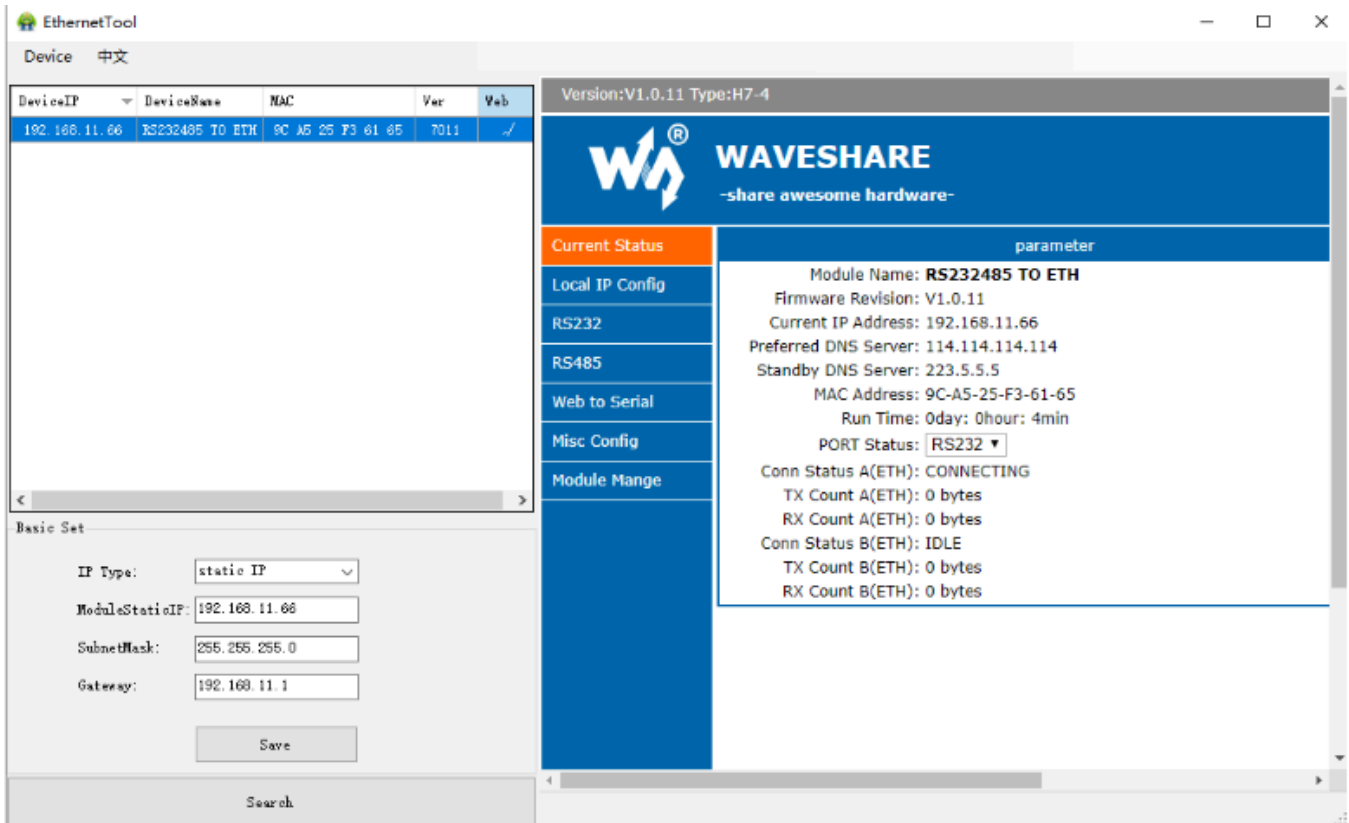


(/wiki/File:RS232-RS485_net_(3).png)

Method 2: Test directly with the computer

If you only have one network cable and no router or switch, you can connect the computer and RS232/485 TO ETH through a single network cable (similar to one-to-one communication between two computers through a network cable).

- Control Panel (File Explorer) -> Network Connections -> Double-click the network card -> Properties -> Internet Protocol Sakamoto 4 (TCP/IPV4) -> Use the following IP address -> Set the IP of the same frequency band as RS232/RS485 TO ETH -> OK.

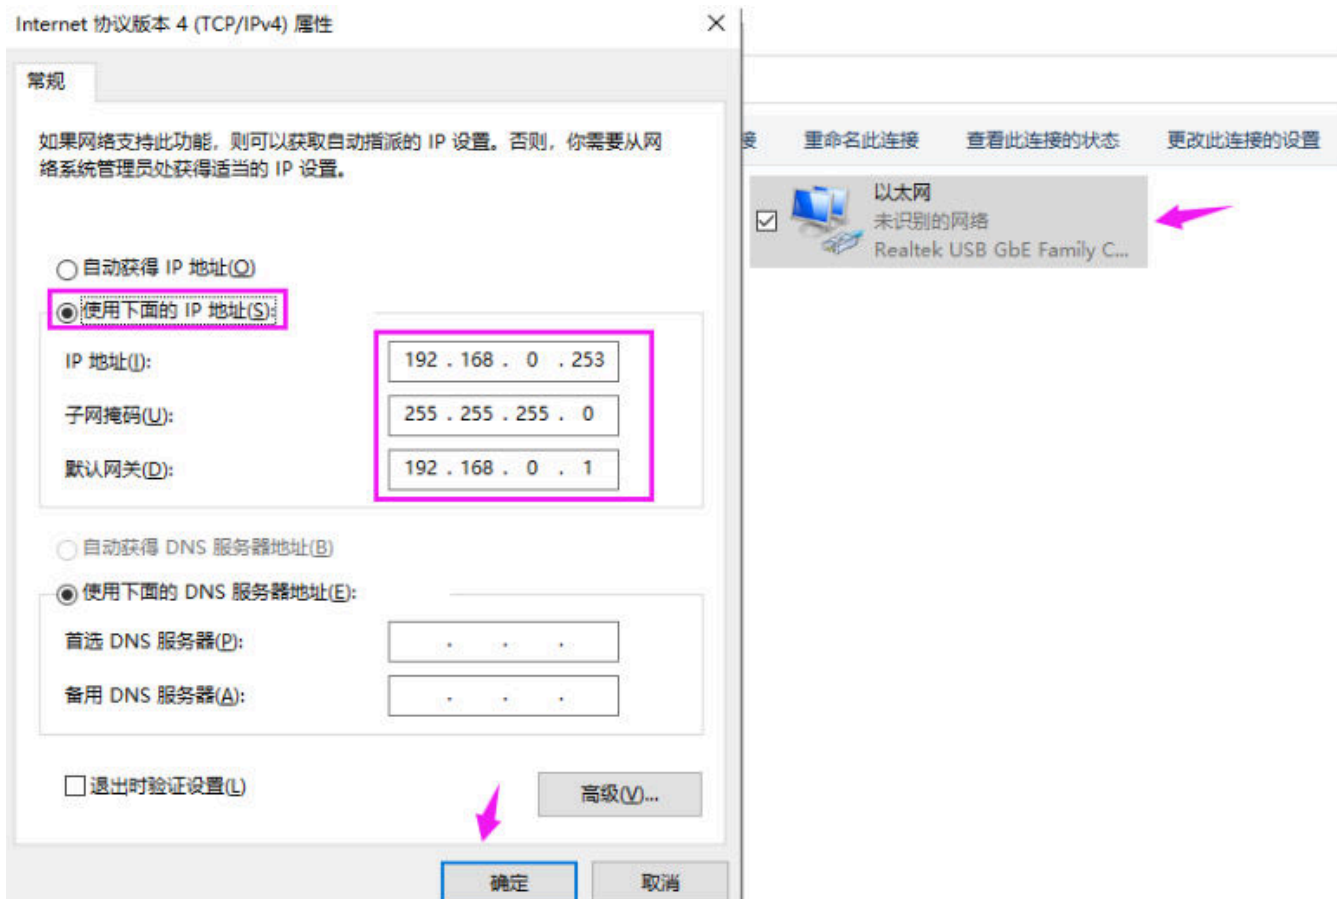


(/wiki/File:RS232-RS485_net_(5).png)

RS232 TCP communication


Hardware connection

- Connect RS232/485 TO ETH (<https://www.waveshare.com/rs232-485-to-eth.htm>) and USB TO RS232/485/TTL (<https://www.waveshare.com/usb-to-rs232-485-ttl.htm>) via female to female crossover serial cable:

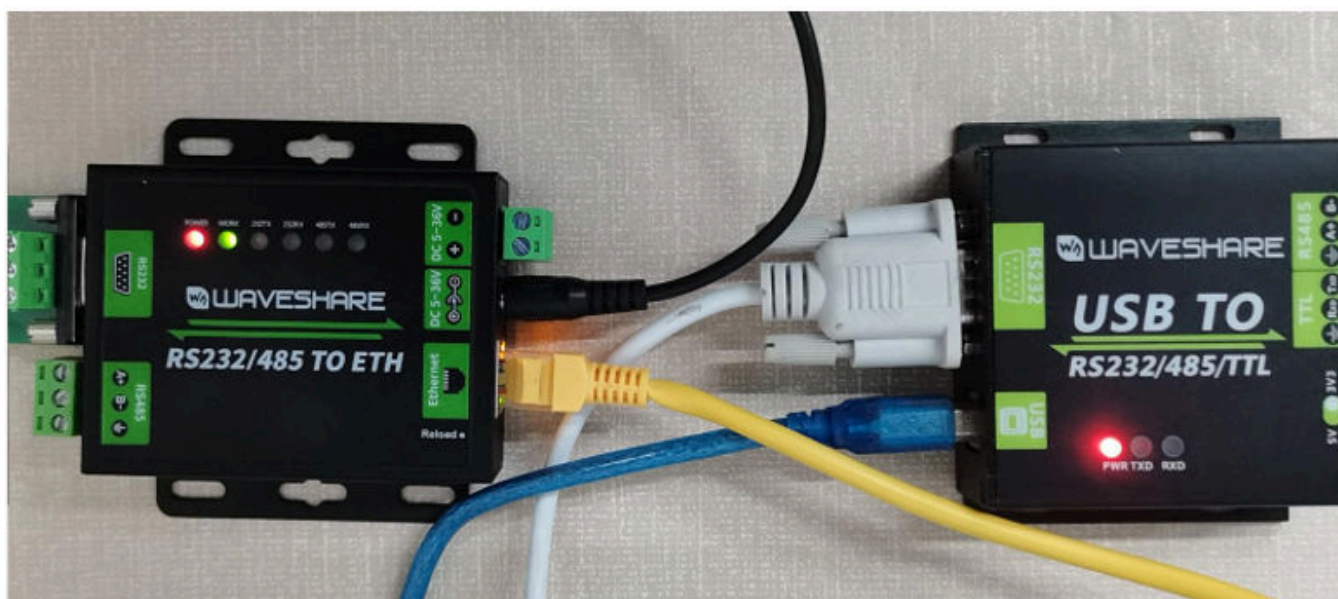

(/wiki/File:RS232-RS485-NET(6).png)

- Open the TCP/IP/UDP debugging software (<https://files.waveshare.com/upload/c/c1/TCP%26UDPDebug.rar>), set the computer as the server, RS232/485 TO ETH as the client,

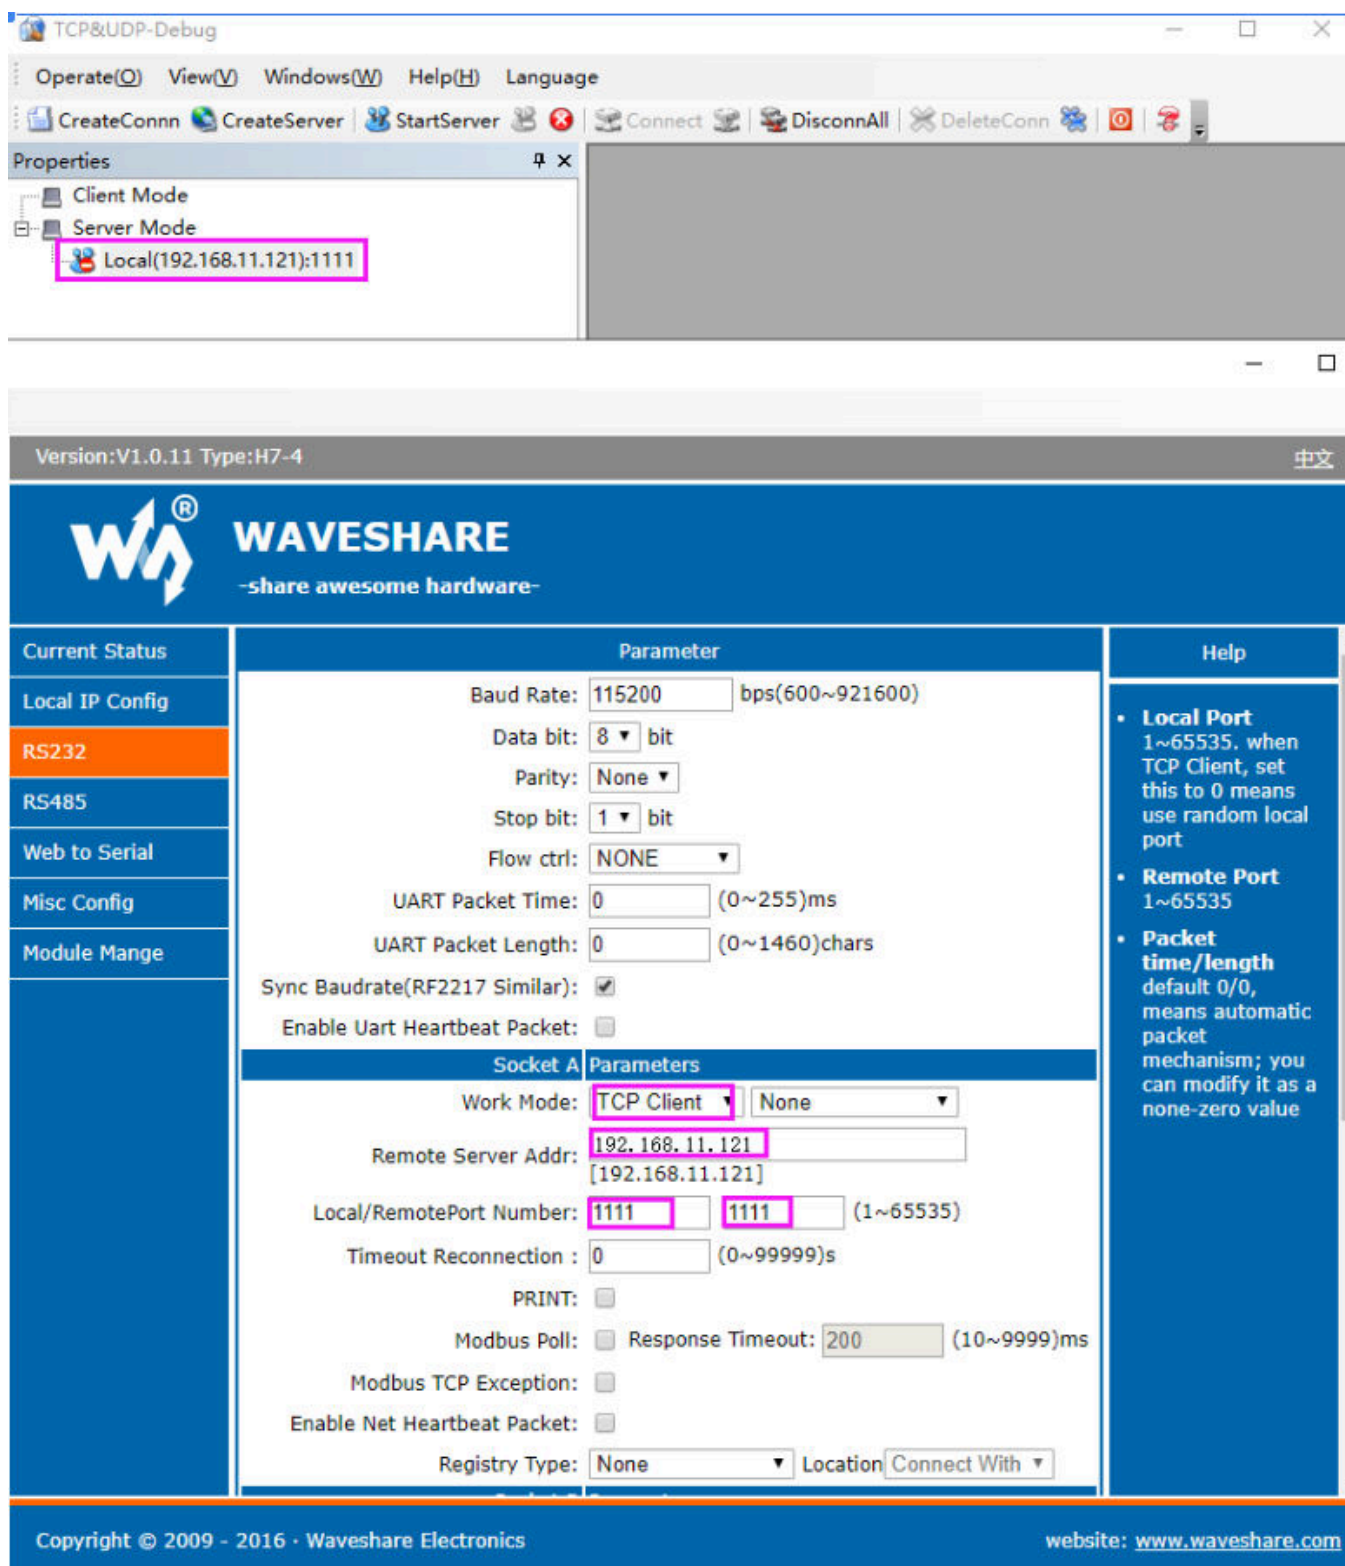


(/wiki/File:RS232-RS485-NET(8).png)

- Start the server -> open the serial port assistant -> select the corresponding serial port:

- 启动服务器->打开串口助手->选择对应的串口

- 端口 (COM 和 LPT)
 - USB Serial Port (COM112) ←
 - 通信端口 (COM1)

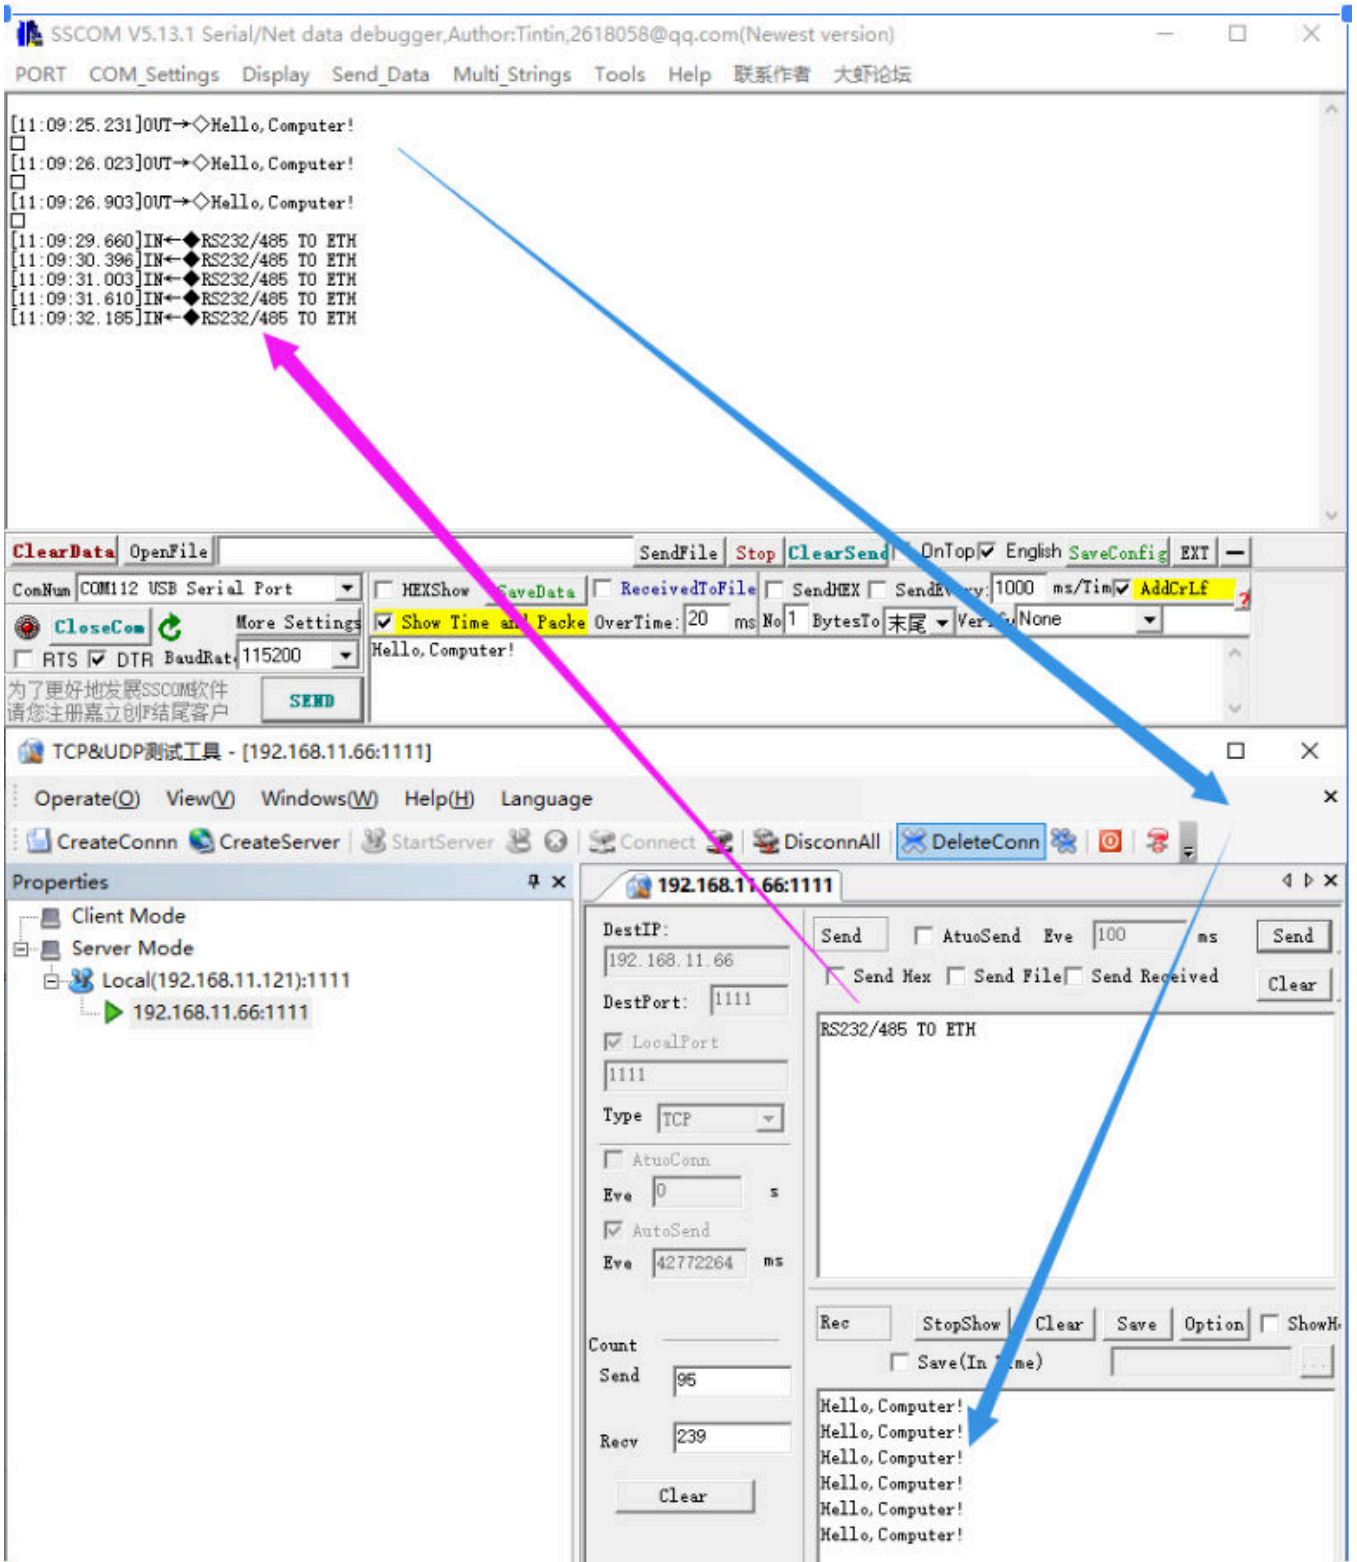

(/wiki/File:RS232-RS485-NET(9).png)

Resources

- User Manual (<https://files.waveshare.com/upload/8/8e/RS232485-TO-ETH-user-manual-en.pdf>)
- Code (https://files.waveshare.com/upload/a/aa/PC_Socket_Demo.zip)
- Software (/wiki/RS232/485_TO_ETH_Software)
- AT Command manual (https://files.waveshare.com/upload/8/8b/RS485-To-ETH-AT-Command_Manual.pdf)

FAQ

Question: Why can't the configuration web page be opened in the computer's browser and cannot communicate with TCP?

Answer:

Set the IP of RS232/485 TO ETH and computer to the same network address and different node address IP:

For example, If RS232/485 TO ETH IP is 192.168.0.7; computer IP is 192.168.0.8


Question: Why can I use USB TO RS232/RS485 to communicate normally, but cannot send and receive data when connecting to sensors and other devices through 485/232?

Answer:


- After confirming that the network communication is normal, you can observe whether the 232RX (485RX) light is flashing. If it does not flash, it means that there is no data in the RS232/485 TO ETH. Check whether the RS232/RS485 wiring is correct.

If the RXD and TXD of some RS232 lines are not cross-connected, they cannot communicate (check with a multimeter, if 2 and 2 are connected, 3 and 3 are directly connected to the serial line; if 2 and 3 are connected, 3 and 2 are connected. .), you can replace the crossover serial cable:

- If the indicator light is normal, please turn off the tool and then turn it on to test.

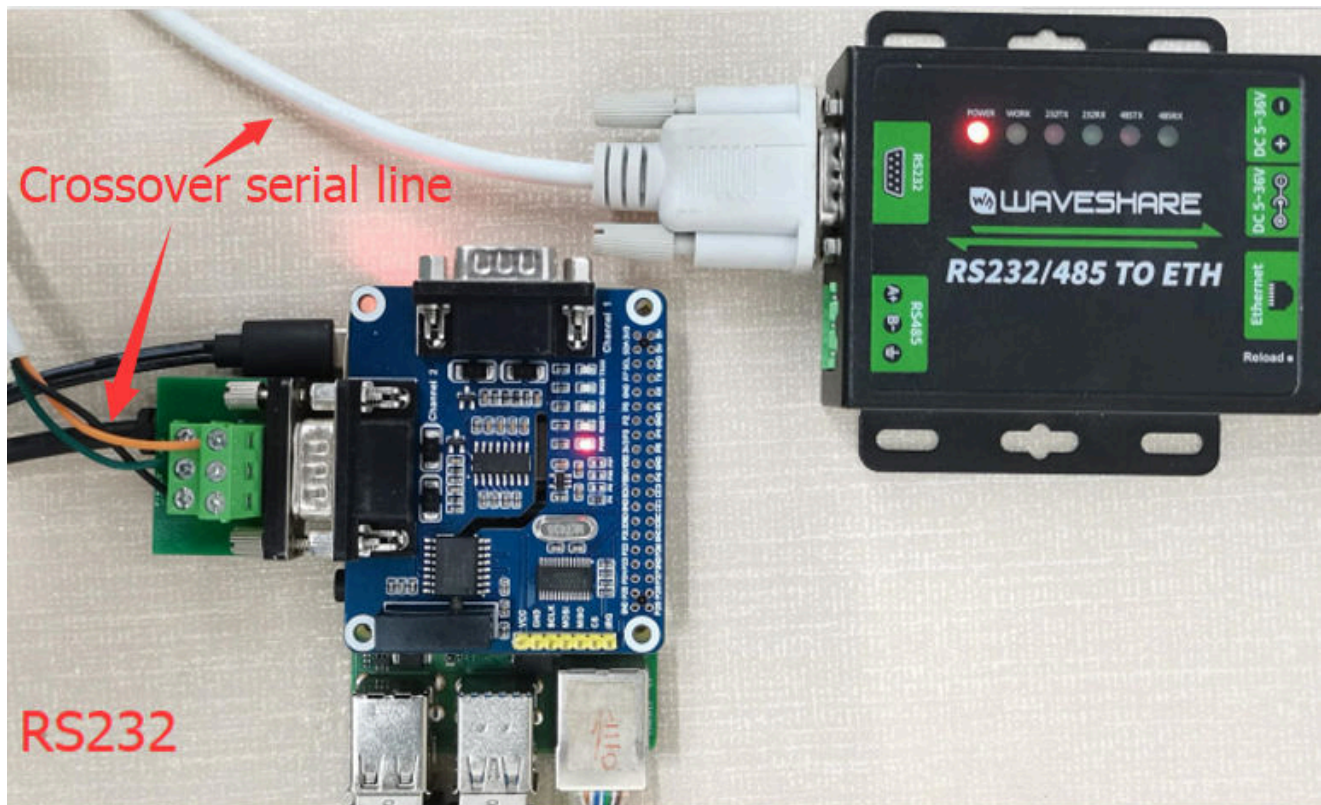

Here use Raspberry Pi instead of sensors and other devices.

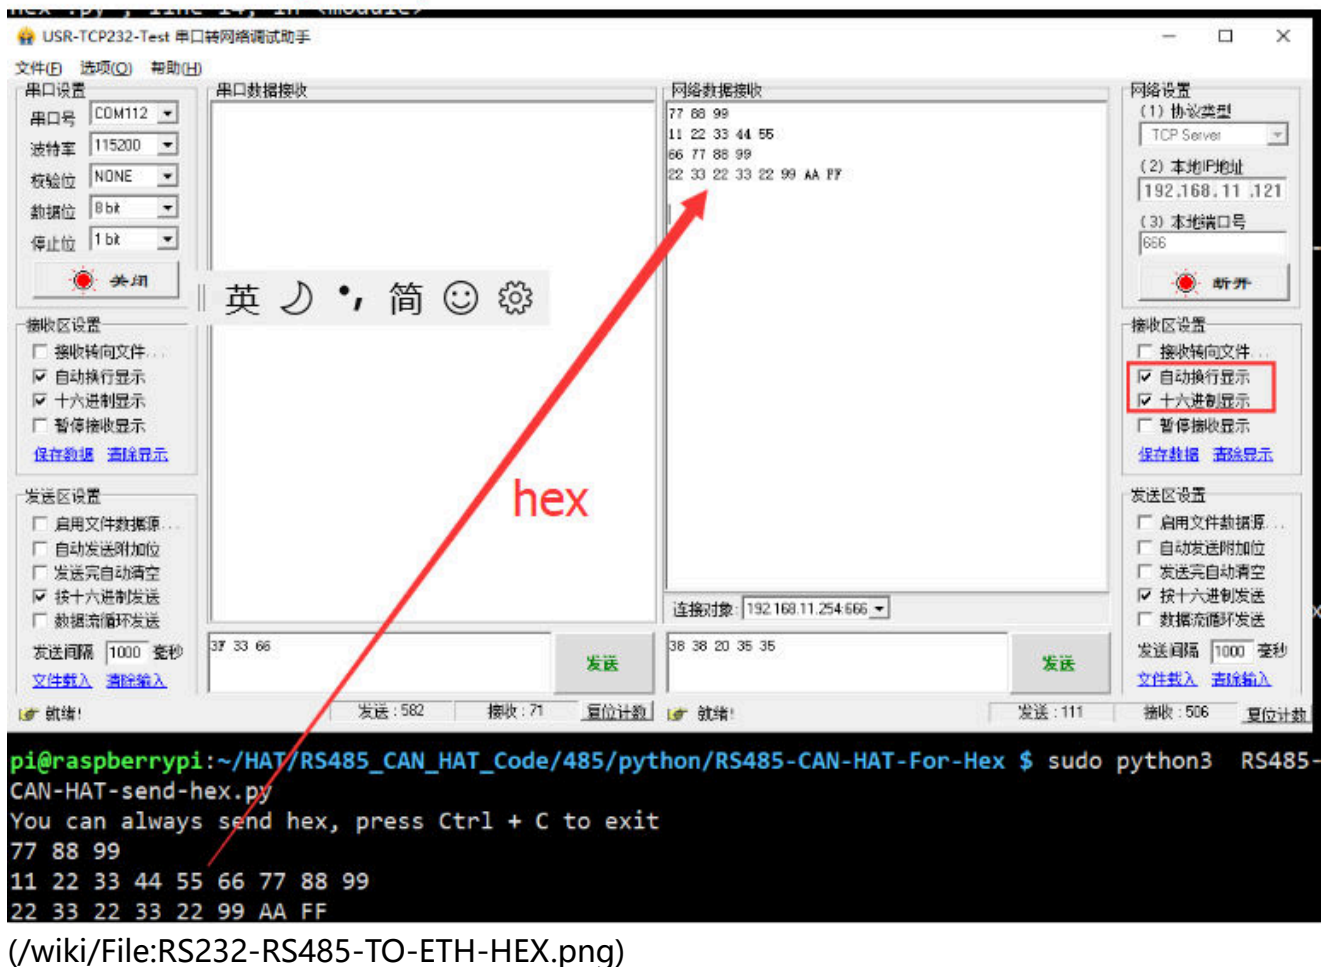

Question: How can I restore the factory settings?

Answer:

After the module is powered on, press and hold the reload button for more than 5 seconds to restore the factory settings:



After power on, press this button for 5 seconds to restore the factory settings

(/wiki/File:RS232_RS485_TO_ETH_reload.png)

Question: How do I enter serial command mode?

Answer:

- The serial device sends "++++" continuously to the module, and when the module receives "++++", it sends 'a' to the device. No data can be sent during the packetization time before sending the '+++'.
■ When the device receives 'a', it must send an 'a' to the module within 3 seconds.
■ After receiving the 'a', the module sends "+OK" to the device and enters the "AT command mode".
■ After receiving "+OK", the device knows that the module has entered "AT command mode" and can send AT command to it.
■ The serial device sends the command "AT+ENTM" to the module, and after receiving the command, the module displays "+OK" and returns to the previous working mode.

Question: How to connect the RS232/485 TO ETH and Modbus device?

Answer:**Use Hex Data Transparent Transmission Mode (Recommended)**

- 1. Connect the RS232/485 TO ETH and Modbus device.
- 2. Configure RS485 TO ETH's IP address and COM port, and ensure it is connected to the local network.
- 3. Use Modbus TCP protocol to connect the device through RS485 TO ETH, correctly configure the parameters such as the baud rate, and set the working mode as "None".
- 4. Send data to the Modbus device like USB to RS485, and return the corresponding data:

Transmit: 01 05 00 00 FF 00 8C 3A

Receive: 01 05 00 00 FF 00 8C 3A

Modbus RTU and Modbus TCP Bidirectional Conversion

- 1. Connect RS232/485 TO ETH to Modbus devices.
- 2. Configure the IP and COM port of RS485 TO ETH, and ensure it can be connected to the local network.
- 3. Use Modbus TCP protocol to connect RS485 TO ETH to the device, and correctly configure the parameters such as baudrate.

Version: V1.0.2 Type: HB

WAVESHARE
-share awesome hardware-

Current Status
Local IP Config
RS232
RS485
Web to Serial
Misc Config
Module Mangle

Parameter

Baud Rate: 115200 bps(300~230400)
Data bit: 8 bit
Parity: None
Stop bit: 1 bit
Flow ctrl: NONE
UART Packet Time: 0 (0~255)ms
UART Packet Length: 0 (0~1460)chars
Sync Baudrate(RF2217 Similar): ☒
Enable Uart Heartbeat Packet: ☐

Socket A Parameters

Work Mode: TCP Server | ModbusTCP
TCP Server MAX Sockets: 8 Up to MAX KICK
Local Port Number: 1111 (1~65535)
PRINT: ☐
Modbus Poll: ☐ Response Timeout: 200 (10~9999)ms
Modbus TCP Exception: ☐
Enable Net Heartbeat Packet: ☒
Net Heartbeat Packet: www.waveshare.com
HEX: ☐ ASCII: ☒
Beat Time: 3 (1~65535) s

Help

- Local Port**
1~65535. when TCP Client, set this to 0 means use random local port
- Remote Port**
1~65535
- Packet time/length**
default 0/0, means automatic packet mechanism; you can modify it as a none-zero value

Copyright © 2005-2022 · Waveshare Electronics
website: www.waveshare.com


(/wiki/File:RS232-485_to_ETH_FAQ.png)

- 4. According to the Modbus device manual, you can use the corresponding commands (Address code, function code, etc.) to read the data in Modbus TCP protocol.

- 5. Convert the Modbus TCP data package to Modbus RTU, and use RS485 TO ETH to send the data pack to the device.
- 6. Receive the Modbus RTU response from the device, and convert it to Modbus TCP format.

The serial port sends 01 03 10 01 00 07 51 08

ETH receives 00 00 00 00 00 06 01 03 10 01 00 07

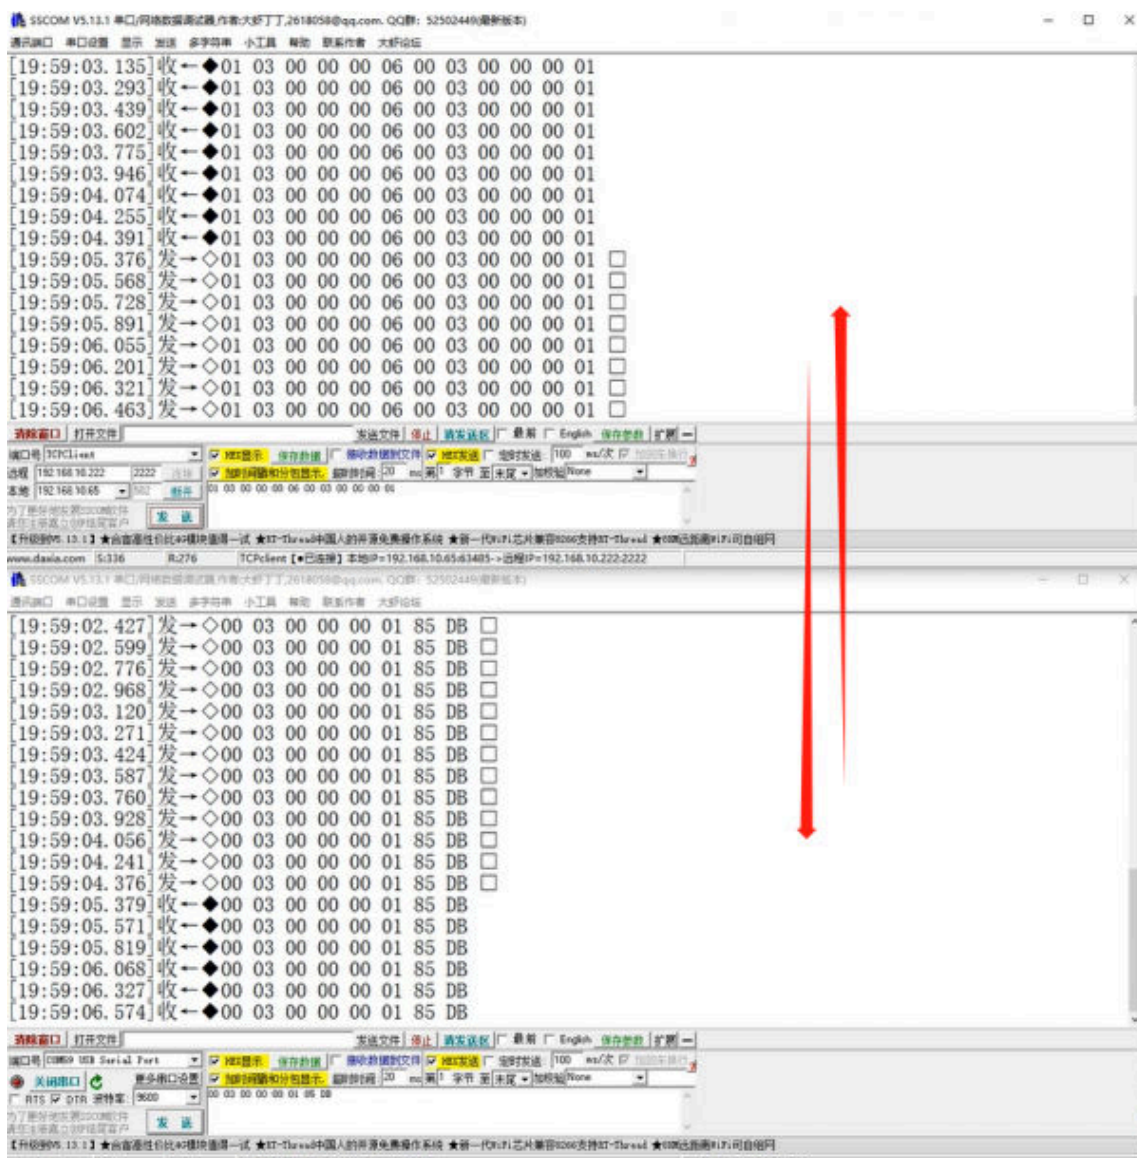


(/wiki/File:RS232-485_to_ETH_faq.png)

- 7. Deal with response data in the application.
- 8. Note that the Modbus TCP to Modbus RTU requires the specified gateway hardware or software. In addition, you need to understand more about Modbus TCP and Modbus RTU protocol so that you can correctly configure and use the gateway devices.

Question:How to establish communication between two RS485 RS232 TO ETH?

Answer:

Set one is the client, and the other one is the server. The remote IP and COM port of the client is the local IP and COM port of the server.

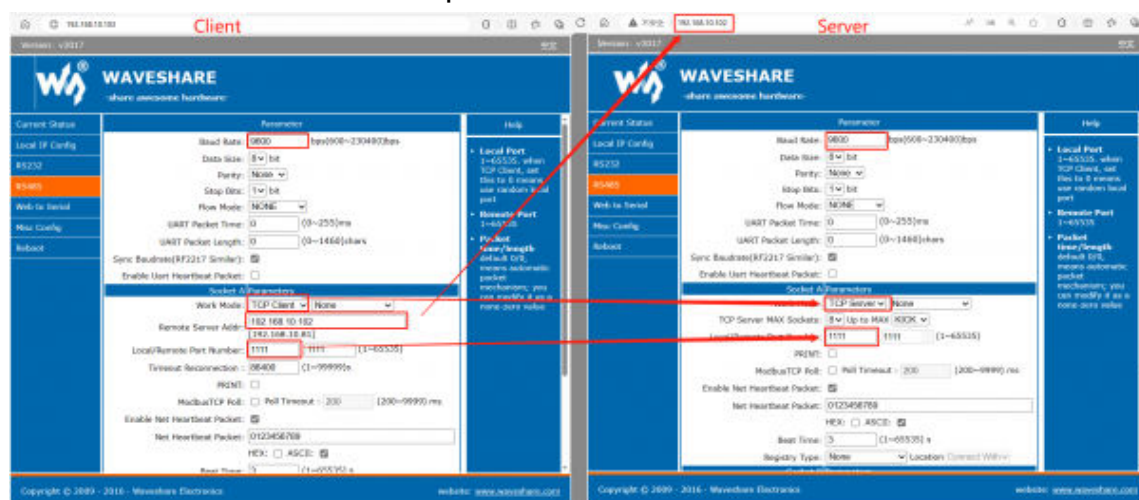

(/wiki/File:RS232-485_TO_ETH_FAQ04.png)

Question:How many Client connections can RS232/485 TO ETH receive as TCP server?


Answer:

Up to 8 client devices.

Question:When should I use Modbus TCP to Modbus RTU? Or only using an RTU transparent connection?

Answer:

Modbus TCP for remote, multi-device communication with high security, Modbus RTU for local or physical interface limitations.

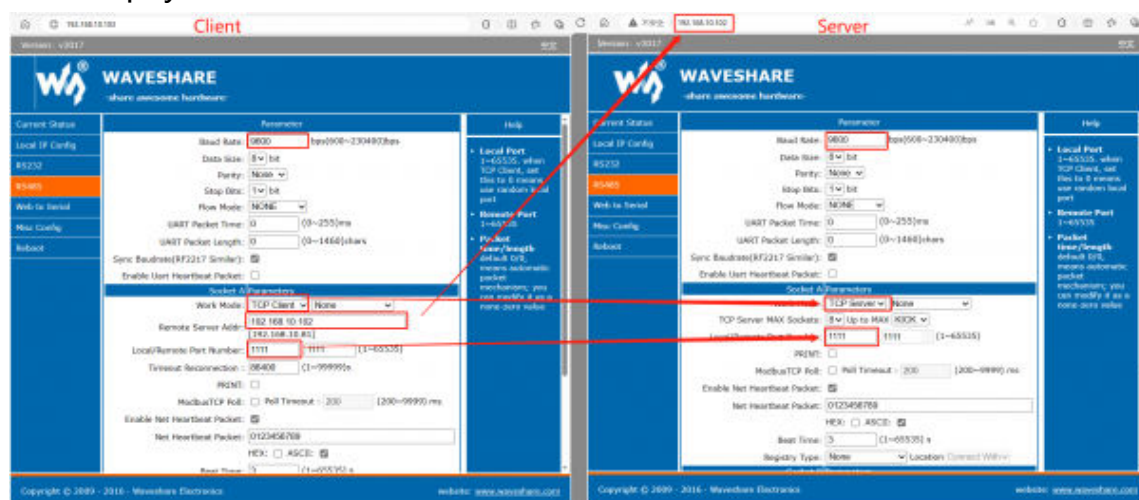


(/wiki/File:RS232-485_TO_ETH_FAQ04.png)

Question:What should I do if I can't receive data and the communication is abnormal?

Answer:

- Check the network (ETH):

1. Can the device IP be pinged (by default)? If pingable, it indicates the device is not dead. The host software should attempt to connect to the device's IP and port to verify normal connectivity.

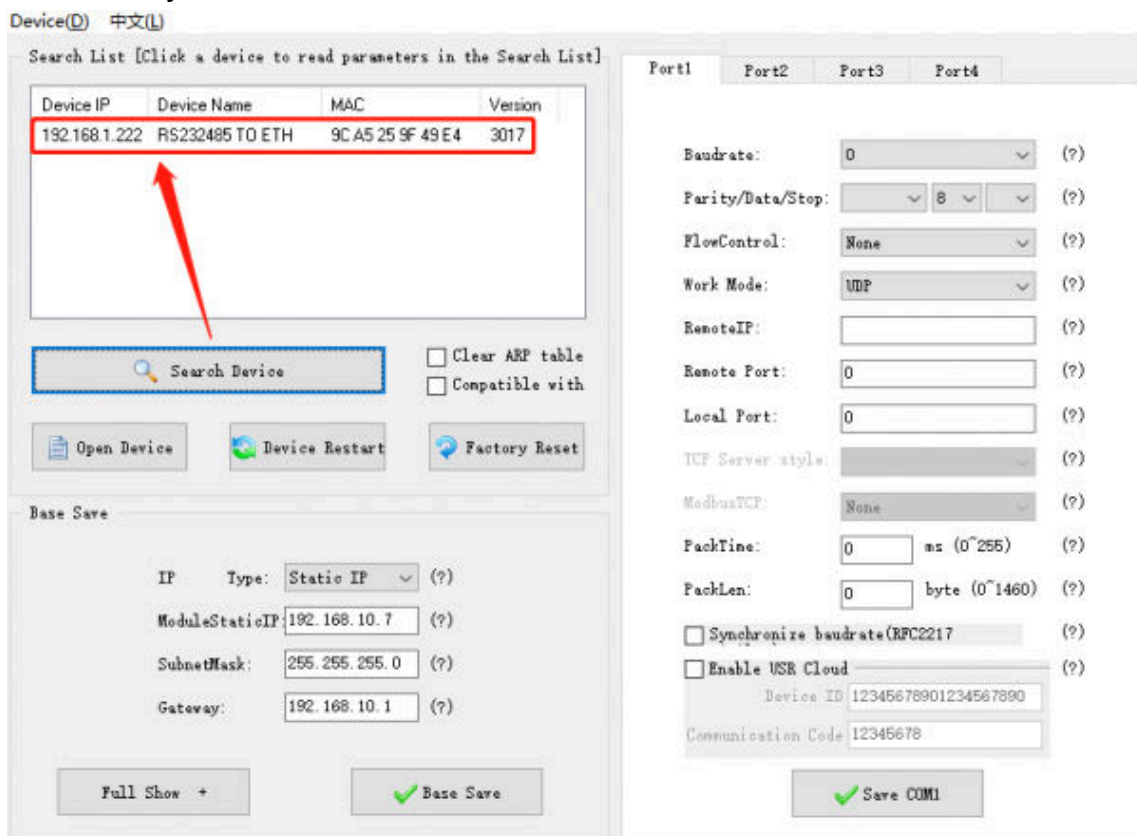

(/wiki/File:RS232-485_TO_ETH-faq09.png)

2. In the case where a TCP connection is established but no data is received, following the assessment in 1), if the TCP channel is established but no data is received, further investigation is necessary.

3. Set RS485 TO ETH to 192.168.0.7 with port number 1111; Set the computer to 192.168.0.8 with port number 1111.

4. If the network host machine fails to send data normally, consider configuring network heartbeat packet verification. If normal, data will be periodically transmitted.

5. Ensure SSCOM is added to the firewall, otherwise the firewall may block TCP connections, or test by temporarily disabling all firewalls on the computer.


- Detecting RS485 Serial Port Issues:

1. Confirm hardware connections including serial port devices, and check if your gateway and energy meter are correctly connected. Ensure power and data lines are connected properly and there are no loose connections.
2. If the serial port terminal device receives data but does not respond properly, monitor the data from the serial port device. Use a 485 to USB serial cable, connect it to the interface of the 485 device and the computer's USB port, assign a COM port on the computer, open serial debugging assistant software, set the serial port parameters consistently, input the corresponding COM port, and monitor the data from the 485 device. 485 Wiring: T+ --A T- --B; Check if the instructions sent to 485 are correct; Are there proper responses from 485 after sending correct instructions?
3. Confirm serial port parameters such as baud rate, data bits, and stop bits: Baud rate should be configured according to the connected RS485 device, commonly used rates are 9600 and 115200; Refer to the device manual or contact RS485 device technical support for configuration, especially if set to Modbus mode, confirm if the function code matches.

Question:What should you do when encountering a network failure that requires manual device restart to fix?

Answer:

You can establish an automatic device network failure detection system, which triggers a restart when data anomalies are detected.

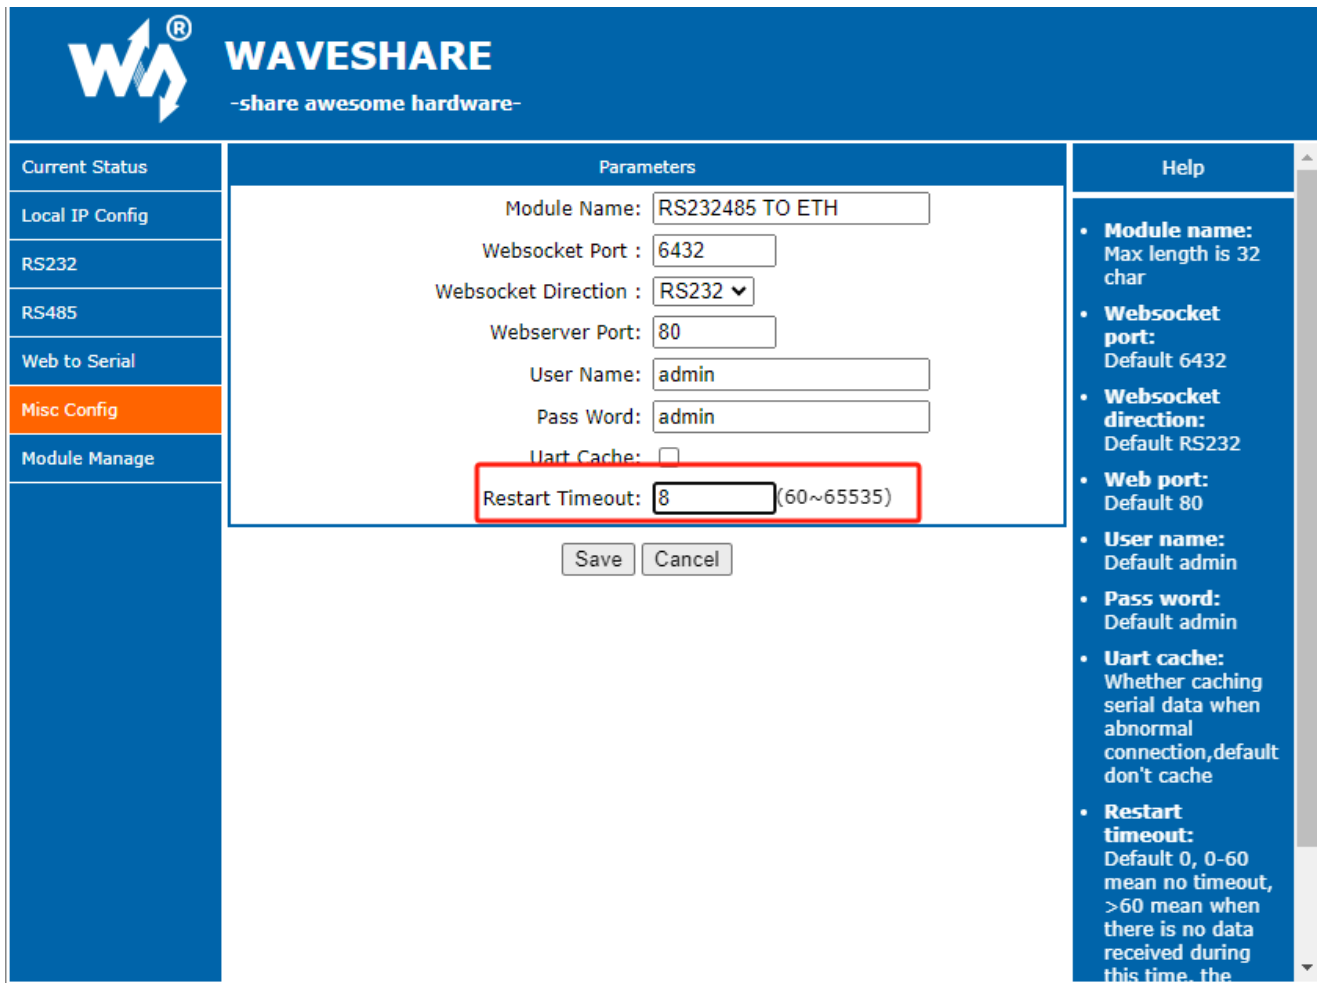

WAVESHARE
-share awesome hardware-

Current Status

Local IP Config

RS232

RS485

Web to Serial

Misc Config

Module Manage

Parameters

Module Name:

Websocket Port :

Websocket Direction :

Webserver Port:

User Name:

Pass Word:

Uart Cache: ☐

Restart Timeout: (60~65535)

Help

- **Module name:**
Max length is 32 char
- **Websocket port:**
Default 6432
- **Websocket direction:**
Default RS232
- **Web port:**
Default 80
- **User name:**
Default admin
- **Pass word:**
Default admin
- **Uart cache:**
Whether caching serial data when abnormal connection, default don't cache
- **Restart timeout:**
Default 0, 0-60 mean no timeout, >60 mean when there is no data received during this time, the

(/wiki/File:RS232-485_TO_ETH09.png)

Question:Can we connect both RS232 and RS485 at the same time with ETHERNET? OR only one from RS485 or RS232 can be connected?


Answer:

Yes, you can connect RS232 and RS485 simultaneously (same time) with Ethernet.

Question:Is there an internal jumper to enable the 120ohm termination resistor for the serial link?

Answer:

Yes, it's possible to enable termination using the jumper. The attached image shows the jumper installed.

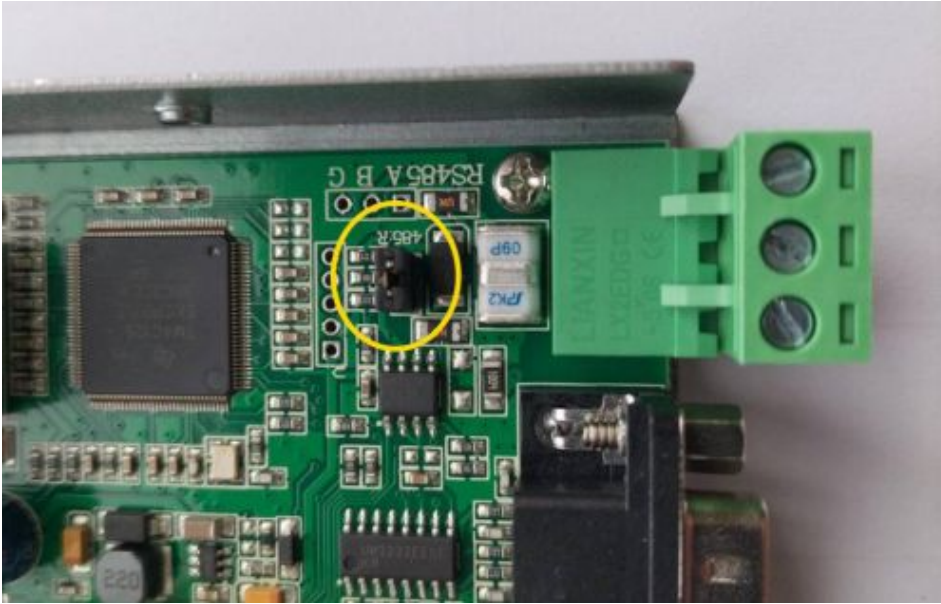

(/wiki/File:RS232-485-

jumper.jpg)

Support

Technical Support

If you need technical support or have any feedback/review, please click the **Submit Now** button to submit a ticket, Our support team will check and reply to you within 1 to 2 working days. Please be patient as we make every effort to help you to resolve the issue.

Working Time: 9 AM - 6 PM GMT+8
(Monday to Friday)

Submit Now (<https://service.waveshare.com/>)

Retrieved from "https://www.waveshare.com/w/index.php?title=RS232/485_TO_ETH&oldid=96011
(https://www.waveshare.com/w/index.php?title=RS232/485_TO_ETH&oldid=96011)"