

USB Blaster V2

From Waveshare Wiki

Jump to: navigation, search

Introduction

USB Blaster Download Cable is designed for ALTERA FPGA, CPLD, Active Serial Configuration Devices and Enhanced Configuration Devices, USB 2.0 connection to the PC and JTAG, AS, PS to the target device.

More (<http://www.waveshare.com/USB-Blaster-V2.htm>)

Resources

- User Manual (https://www.waveshare.com/w/upload/DV_D_ALTERA_EN/data/product/USB_Blaster_V2_PG-1-1.htm)
- Software (/wiki/Altera_Software)
- Datasheets (/wiki/Altera_Datasheets)



FAQ

Question:What is the difference between this product and other USB Blasters on the market?

Answer:

At present, there are basically three types of USB Blaster download cable solutions on the market:

【Option 1】 FT245BL/FT245R + CPLD:

This solution is the closest to the original. When the CPLD clock is 24MHz, the download line speed can reach the original performance.

【Option 2】 CY7C68013A:

The biggest advantage of this solution is that the cost has dropped a lot, and the disadvantage is the speed. Although the 68013 is a high-speed USB chip, its internal MCU can only work up to 12MIPS, and the speed is almost 1/4 of the original solution.

【Option 3】 C8051F320/1:

The speed is equivalent to 1/2 of the original solution, and the cost is slightly lower than that of the CY7C68013A solution.

Our product uses option 1.

Question:Differences between USB Blaster and USB Blaster V2?

Answer:

The appearance size and PCB layout are slightly different, the latter is slightly larger than the former.

The function is exactly the same.

Question:USB Blaster is used under Windows, do I need a driver?

Answer:

A driver is required, and the driver is provided with the Quartus software. After installing the software, you need to manually load the USB blaster driver in the device manager, see the user manual for details.

Question:Can USB Blaster support Linux systems?

Answer:

Can. For details, refer to the driver installation tutorial (https://files.waveshare.com/upload/1/1d/Ug_usb_blstr.pdf).

Question:The USB Blaster sometimes fails when programming the chip.

Answer:

Solution: Connect the downloader and the target board, check whether the wiring is good, re-plug and unplug the interface, and then power on and write if there is no problem.


Question:How to set up Quartus to generate pof?

Answer:

In the assignments -- device -- device and pin option, in the configuration tab, check Use Configuration device and select the configuration chip.

Select configuration scheme as Active Serial.

Question:The newly bought board and downloader program in Quartus, always prompt the following error?

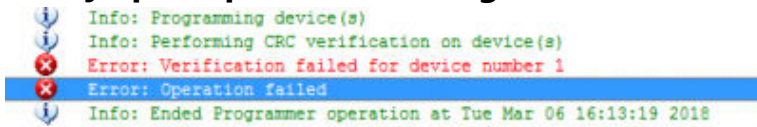


(/wiki/File:USB_Blaster_FAQ.png)

Answer:

Possible reason:

The version of Quartus 11 (this version is relatively stable) that is supported by the CD is not used. Some users encounter this error when using the version of Quartus 9. After installing version 11, the problem is solved.

Question:When using Quartus II to assign pins, it prompts "can't place multiple pins assigned to pin location Pin_101"

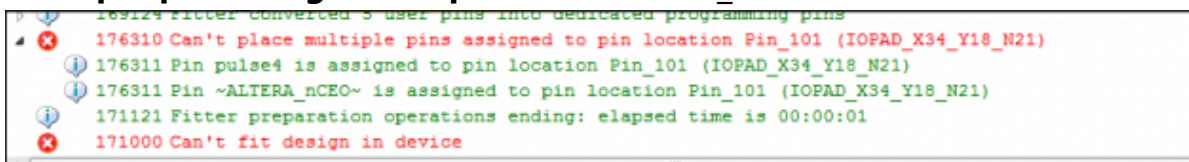

(/wiki/File:USB_Blaster_FAQ2.jpg)

Answer:

Please refer to <http://www.51hei.com/bbs/dpj-39976-1.html> (<http://www.51hei.com/bbs/dpj-39976-1.html>)

Support

Technical Support

If you need technical support or have any feedback/review, please click the **Submit Now** button to submit a ticket, Our support team will check and reply to you within 1 to 2 working days. Please be patient as we make every effort to help you to resolve the issue.

Working Time: 9 AM - 6 PM GMT+8
(Monday to Friday)

Submit Now (<https://service.waveshare.com/>)

*Retrieved from "https://www.waveshare.com/w/index.php?title=USB_Blaster_V2&oldid=73619
(https://www.waveshare.com/w/index.php?title=USB_Blaster_V2&oldid=73619)"*
